




# Motorola Moto G 3rd Generation Motherboard Replacement

This guide demonstrates the motherboard replacement process for the Motorola Moto G 3rd Generation.

Written By: James Copeland

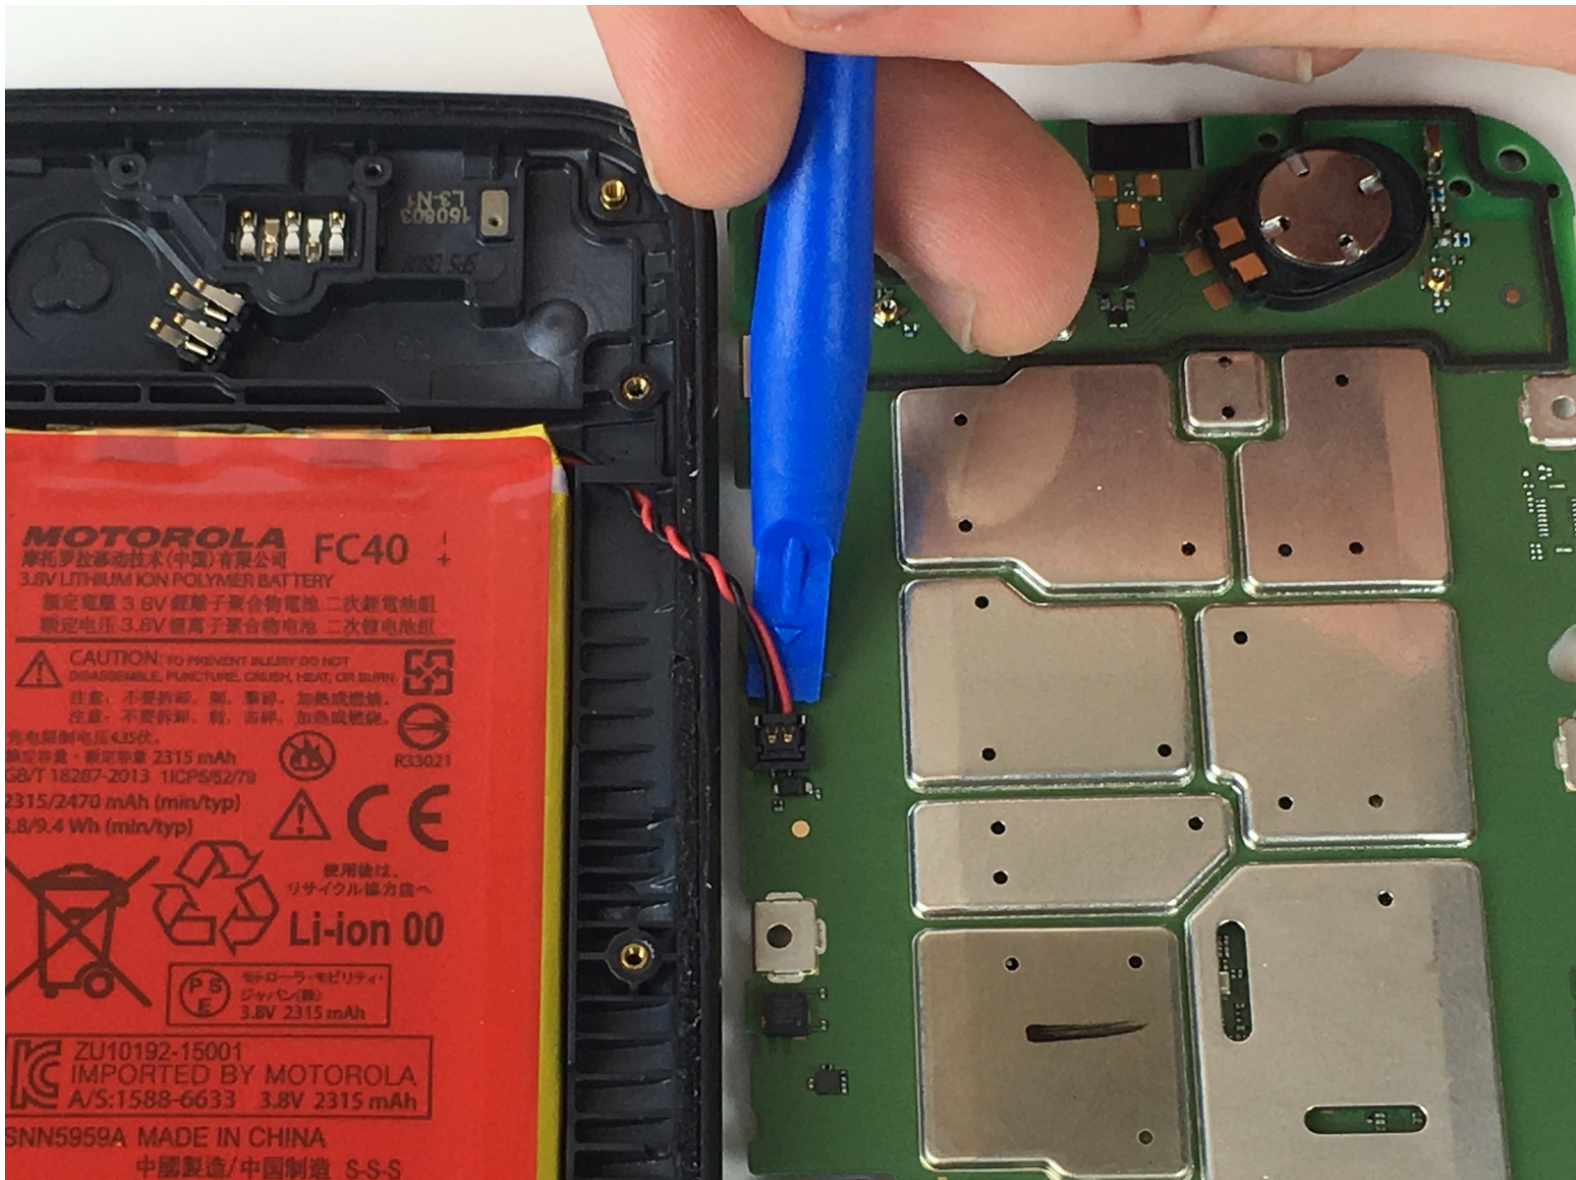

## INTRODUCTION

This guide will show you how to remove the motherboard of your Moto G 3rd Generation. Follow these steps for access into the phone's interior. The disassembly requires the use of a heat gun or an iOpener.

---



### TOOLS:

- [Heat Gun](#) (1)

*Alternative to iOpener*

- [iFixit Opening Picks set of 6](#) (1)
  - [iOpener](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [X-ACTO Knife](#) (1)
  - [64 Bit Driver Kit](#) (1)
-

## Step 1 — Display



- Use your fingernail to pry under the notch on the bottom of the phone and remove the back cover.

⚠ Make sure to fully power off the phone before you begin disassembly.


## Step 2




- ⓘ Use a heat gun or an iOpener as a heating tool. This [guide](#) explains how to use the iOpener.
- Evenly apply heat to the edges of the touchscreen to loosen the adhesive. Continue to Step 3 once the edge of the screen is warm to the touch.
- ⚠ Do not let the iOpener/heat gun remain on one spot for too long. Excess heat can damage the phone.
- ★ When reassembling the phone, use the iOpener/heat gun to help the adhesive fuse to the new screen. Heat the screen edges, apply pressure to the screen, and hold the screen in place until it is secure.




## Step 3


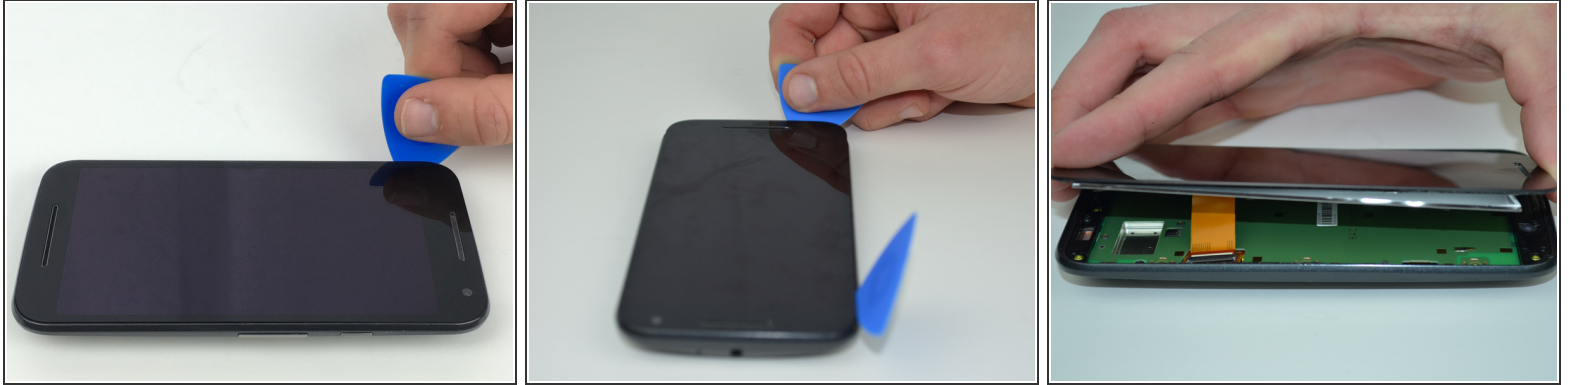


- As the adhesive loosens, pry up an edge of the screen with a plastic opening tool or an opening pick. A suction cup may also be useful here.
- Use an opening pick to hold that edge in place and continue this process around the entire screen, applying more heat as necessary.

 Avoid damaging the LCD screen connector while prying along the screen edges. It is located on the left edge of the phone, across from the volume controls.


-  During reassembly, new adhesive may need to be applied over the old adhesive to properly secure the screen.

## Step 4

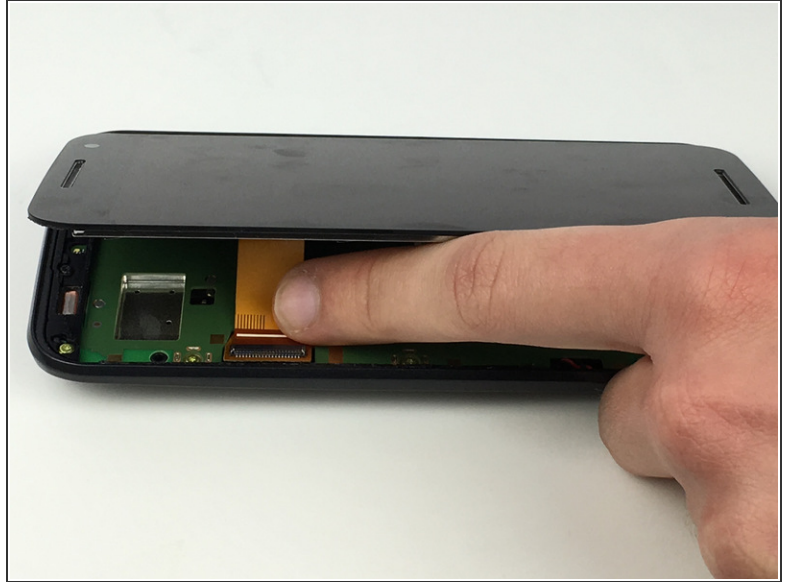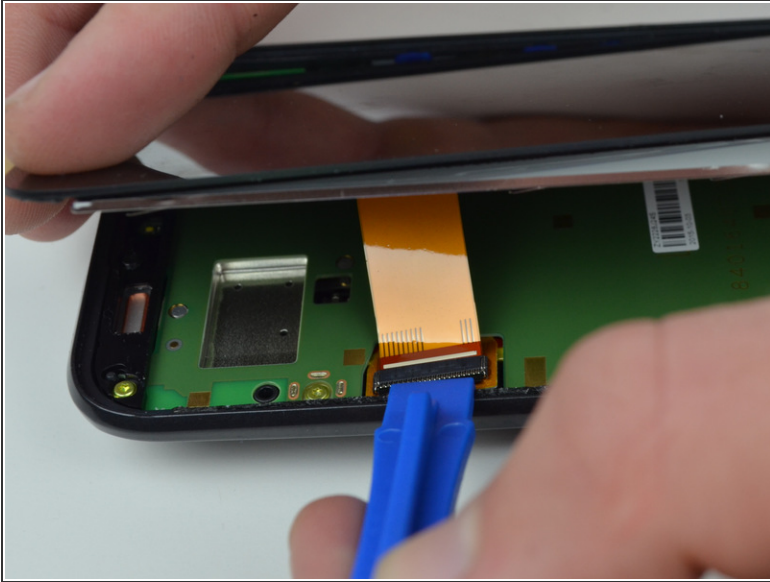


- Use a plastic opening tool to flip up the lock on the display cable ZIF connector.
- Pull the display cable from its socket on the motherboard.

## Step 5 — Motherboard

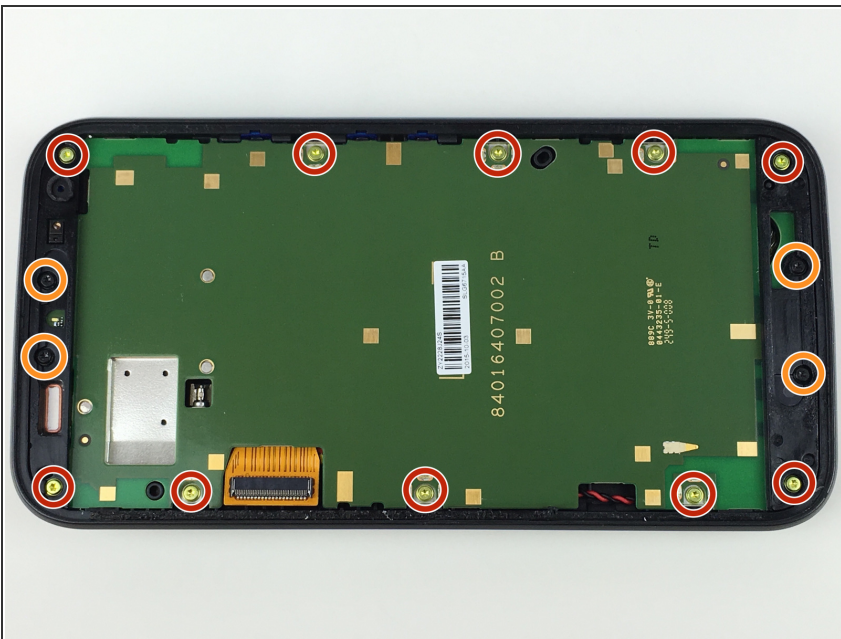


- Remove the ten 2.4 mm T4 screws from the sides of the motherboard.
- Remove the four 4.5 mm T4 screws from the top and bottom of the motherboard.

## Step 6

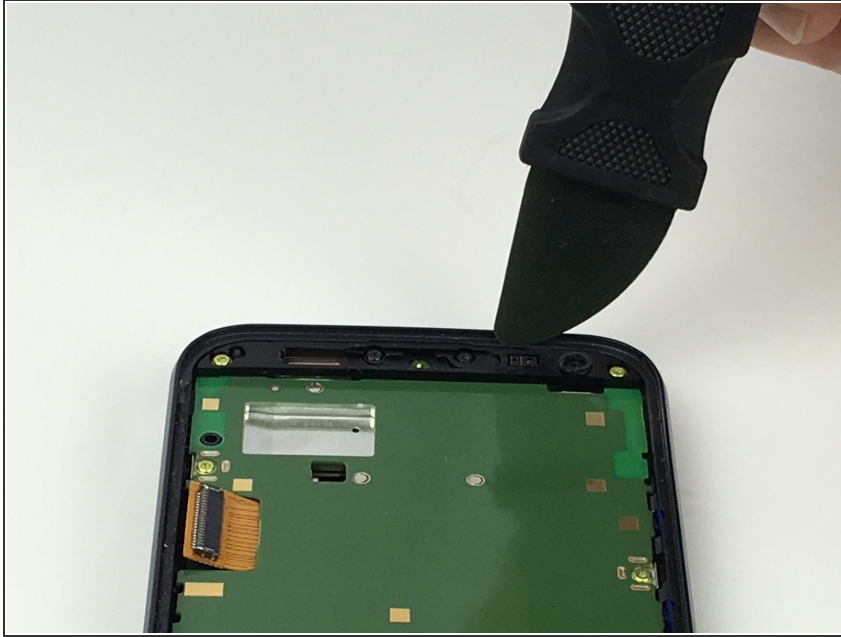

- If adhesive residue is holding the motherboard in place, use a Jimmy to cut the adhesive between the motherboard and the back of the phone.
- Carefully lift the right edge of the motherboard from the phone.
- ⚠ Avoid pulling on the battery wires, which connect the left underside of the motherboard to the battery.

## Step 7

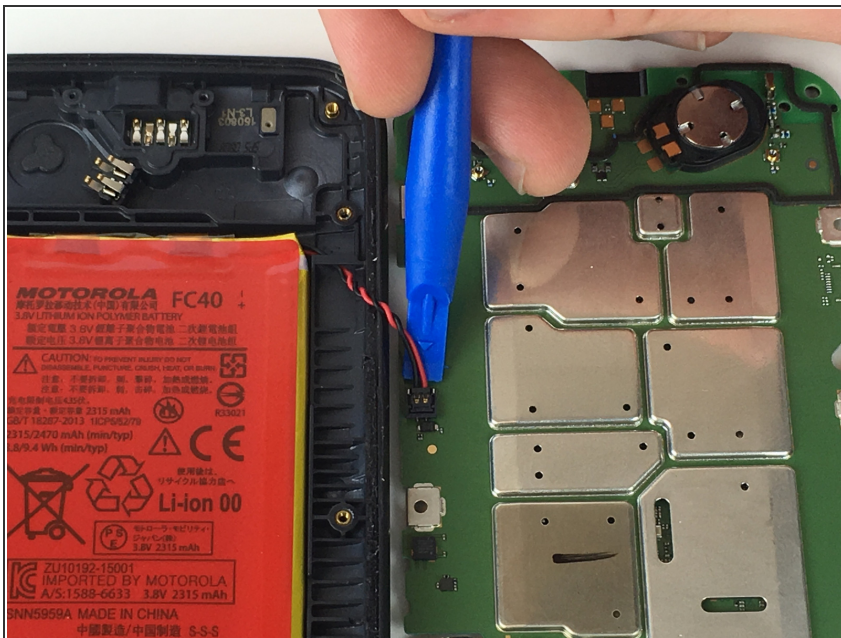

- Use a plastic opening tool to disconnect the battery wires from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 07:12:52 PM.